




Flush Board (No soffit) Installation

For areas that do not have a standard soffit. Our “Deck Channel with Deck Cover” is best. This channel has a small lip that is bent inside the channel to allow for multiple installation options. With the proper cover, this system will have a seamless look to the home.




How this installs...

1. Align the channel to the appropriate area to ensure a level and proper look. In order to attach the channel to the surface there are two common methods; 1. Use a screw through the back of the channel (As shown in diagram). 2. Use a screw going vertical passing through one of the diode holes in the channel and penetrating through the lip of the channel on the top. And anchoring into the structure above.

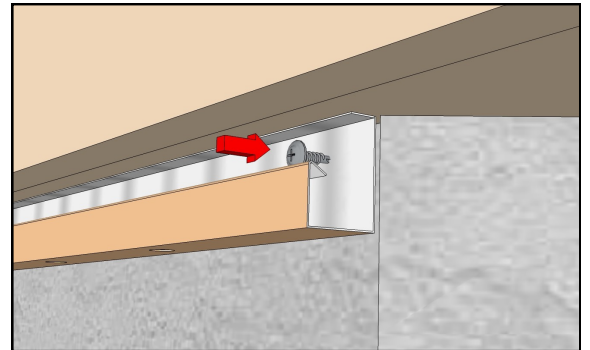

2. With the channel secured into place. Insert all diodes and electronic wires and test system. Using our 90 degree deck cover, place the cover directly over the front creating a new outward face for the Trimlight system.

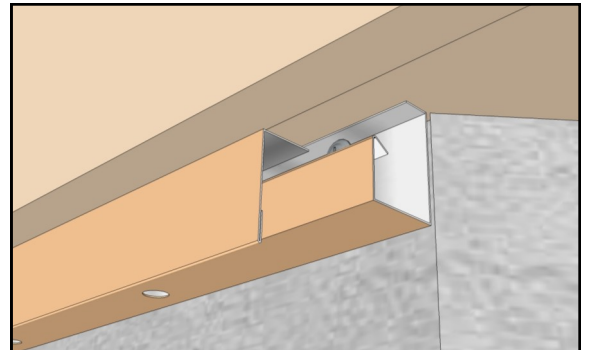

3. In order to hold the deck cover in place. Use small self tapping or self piercing screws (1/4" or 3/8") to hold the deck cover to the channel. Insert the screw between diodes to ensure no screws penetrate into a diode.

Once cover is fully installed. Use touch-up paint to paint the screw head to give a clean installed look.

